

CHANGING THE FURZONE LEVER



The lever sits under the front cover that has the Furzone emblem on it. It opens like the battery compartment of your TV remote. Push forward, then lift it up from the front. It has little tags that lock it in on both sides. Watch how this cover comes out, because it goes back in the same way.

With the front cap gone, you will see the lever. There is a large screw that takes a flathead screwdriver. To remove the screw, turn **CLOCKWISE** to loosen. Turn to the right because the screw has left handed threads.



Once the screw is loose, take the lever out. Do this by lifting the lever from the backside, lifting it from the bearing first. When the back is up, bring the tip out from under the rubber shield that is across the front of the clipper trying not to rip it. Be careful.

Once the old lever is out, its time to clean all the hair from the inside of your clipper head. You can pick it out, or vacuum it out. If you vacuum, hold the rubber shield with your fingers so you don't suck it out.



After cleaning its time to put the new lever in. It goes in just like you took the old one out. First, the tip goes in first by sliding it under the rubber shield. Next, the end has two points that go on each side of the drive bearing. Make sure there is grease in this area. Level up the lever and screw it down by turning **COUNTER-CLOCKWISE** with your screwdriver. Remember this screw has left-hand threads.

After the lever is securely in place, put the front cover back on. Place it as shown sitting in the grooves on top, but leaving a little part hanging over the end. Remember this cap locks in like the cover for the batteries on your TV remote. Finally, hold the back of the cover down and slide the cover back so the tabs on both sides lock it in place. You can do it!!



IMPORTANT: Check and tighten your hinge screws weekly on your Furzone or any clipper you're using if you use comb attachments. A loose hinge will cause loudness and very poor cutting.